

80g书纸 印单色 90x128mm 骑马钉

307054269

**WARNING:**

As this medical device uses an alternative small-bore connector design different from those specified in the ISO 80369 series, there is a possibility that a misconnection can occur between this medical device and a medical device using a different alternative small-bore connector, which can result in a hazardous situation causing harm to the patient. Special measures need be taken by the user to mitigate these reasonable foreseeable risks



**Representante y Titular:**

**Innovaciones Médicas Del Caribe, Innovamed SRL.**  
www.innovamedrd.com info@innovamedrd.com



**Shenzhen Pango Medical Electronics Co., Ltd**

**Main Site:** Building 2, No. 25 Fenghuang Road, Industrial Zone, Xikeng First Village, Henggang Street, Longgang District, Shenzhen, 518115 Guangdong, P. R. China.

**Additional site I:** 2-4 Floor ,No.5 Shanzhuang Rd., Xikeng Village, Henggang Town, Longgang District, Shenzhen, 518115 Guangdong, P. R. China.



Date: 2025-07-16

Rev:A/1

 **Neovist**

# **ELECTRONIC BLOOD PRESSURE MONITOR**

**Instruction Manual**  
**MODEL: NV-PG-B18**

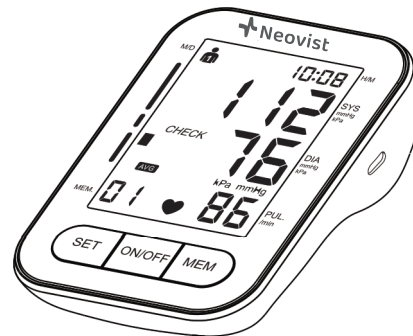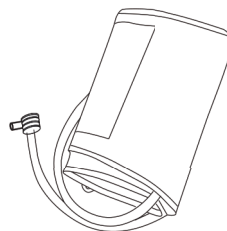

**CE** 2862

## TABLE OF CONTENTS

INTRODUCTION.....	2
NOTES ON SAFETY.....	2
ABOUT BLOOD PRESSURE.....	6
PRECAUTIONS BEFORE USE.....	8
FEATURES OF THE PRODUCT.....	9
PARTS IDENTIFICATION.....	10
INSERT OR REPLACE BATTERIES.....	12
TIME SYSTEM SETUP.....	13
SELECT USER.....	14
AVERAGE QUERY.....	15
UNIT CONVERSION mmHg/kPa DISPLAY.....	15
WHO BLOOD PRESSURE CLASSIFICATION DISPLAY.....	16
ATTACHING THE ARM CUFF.....	16
HOW TO TAKE PROPER MEASUREMENTS.....	17
HOW TO MEASURE BLOOD PRESSURE.....	18
OPERATING METHOD OF CHECK AUTOMATIC MEASUREMENT MODE.....	20
CLEAN AND MAINTENANCE.....	23
SPECIFICATIONS.....	25
TROUBLESHOOTING.....	26
CALIBRATION METHOD.....	37

## INTRODUCTION

The Monitor uses the oscillometric method of blood pressure measurement. Measurement Automatic Electronic Blood Pressure Monitor is intended for use by medical professionals or at home to monitor and display diastolic, systolic blood pressure and pulse rate on adult each time, with an arm cuff around the left upper arm according to the instruction in the “ATTACHING THE ARM CUFF”, The expected life of the product is 5 years.



The product complies with the electromagnetic compatibility requirement of IEC 60601-1-2 and safety standards of IEC 60601-1 and performance of IEC 80601-2-30 as specified in Regulation (EU)2017/745.

## NOTES ON SAFETY

- \* The warning signs and sample icons shown here are listed for your safe and correct use of the unit, so as to prevent injuries or damages to the device.
- \* The icons and meanings are as follow.

### **Examples of signs**



The  icon indicates prohibitions (what you should not do). Matters involving actual prohibitions are indicated by text or pictures in or near . The left icon refers to “general prohibition”.



The icon indicates something that is compulsory (what must always be observed).

Matters involving actual compulsory actions are indicated by text or pictures in or near . The left icon refers to “general compulsion”.



The icon indicates something can't be disassembled or “Don't disassemble”

Matters involving actual compulsory actions are indicated by text or pictures in or near . The left icon refers to “general prohibition”.



**Type BF Applied part**

**IP Classification: IP21**



**Caution**



**Please refer to the instructions for use**



**Consult instruction for use**

**The following symbol indicates that the device is MR-unsafe:**



**MR Unsafe**  
Do not use this equipment in the MRI scan room



**Indicates a medical device that needs to be protected from moisture.**



**Indicates medical device**



**Contact its local authorities to determine the proper method of disposal of potentially bio hazardous parts and accessories.**

Patient must follow doctor's instruction and should not perform self-judgment and self-treatment by the measuring result, **Caution**  
Self-diagnosis of measured results and treatment are dangerous, The device should not be used to judge illness, first aid and continuously monitor measuring.



This device can not be used for Patient transport and surgical care .It can be used in household or fixed places only.  
Please press “on/off ” button to stop work when you feel uncomfortable with the arm, or if the air is inflating abnormally without stop.

Do not let a child below 12 years old and the people who can't express one's intention. When it is used by the people of 12~18 years old, it should accompanied by the Adult. May cause accident or trouble.

Do not use the unit for purpose other than measuring blood pressure. May cause accident or trouble.



Please do not use mobile phone around the device. Please do not use the device around the magnetic field.

The device is prohibited from being used during movement.

Do not use the equipment in outdoor or shower rooms.

Do not disassemble, repair, or remodel the main unit or the arm cuff of the blood pressure monitor.



Will cause the unit to function erroneously.

### ***Requests from Manufacturer***

Make sure there is no connection tubing kinking before start measuring to avoid any injury to patient.

For any patient, do not measure more than 3 times continuously, it should be at least above 5 minutes of interval rest between any two measurements, otherwise will cause extravasated blood.

Do not measure your blood pressure over 6 times each day.

Do not apply the cuff over a wound as this can cause further injury.

Do not measure on the arm which is on the side of a mastectomy, otherwise it could cause injury.

Observe the air pressure value from the LCD display.

When measuring, it could not exceed 280 mmHg, otherwise Please press "ON/OFF" button to stop

Do not use force to bend the arm cuff or the air tube.

Do not knock or drop the main unit.

Always use the specified accessories in the manual, the use of other parts not approved by the manufacturer may cause faults or injuries.

For service information, parts list etc., please contact the dealer.

- The PATIENT is an intended OPERATOR.
- Not servicing and maintenance while the ME EQUIPMENT is in use.
- The user can maintain the product, the maintenance method is described in the maintenance instructions of manual.
- Stop using the equipment immediately, if it is in contact with water.

## **ABOUT BLOOD PRESSURE**

### ***1. What is blood pressure?***

Blood pressure is the force exerted by blood against the walls of the arteries. Systolic pressure occurs when the heart contracts. Diastolic pressure occurs when the heart expands.

Blood pressure is measured in millimeters of mercury (mmHg). One's natural blood pressure is represented by the fundamental pressure, which is measured first thing in the morning while one is still at rest and before eating.

### ***2. What is hypertension and how is it controlled?***

Hypertension, an abnormally high arterial blood pressure, if left unattended, can cause many health problems including stroke and heart attack. Hypertension can be controlled by altering lifestyle, avoiding stress and with medication under a doctor's supervision.

To prevent hypertension or keep it under control:


- Do not smoke
- Reduce salt and fat intake
- Maintain proper weight
- Exercise regularly
- Have regular physical checkups

### 3. Why measure blood pressure at home?

Blood pressure measured at a clinic or doctor's office may cause apprehension and produce an elevated reading, 25 to 30 mmHg higher than that measured at home. Home measurement reduces the effects of outside influences on blood pressure readings, supplements the doctor's readings and provides a more accurate, complete blood pressure history.

### 4. WHO blood pressure classification

Standards for assessment of high blood pressure, without regard to age, have been established by the World Health Organization (WHO), and shown in chart below.

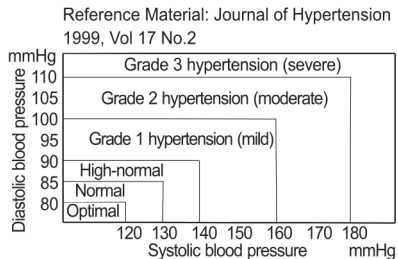

### 5. Blood pressure variations

An individual's blood pressure varies greatly on a daily and seasonal basis. It may vary by 30 to 50 mmHg due to various conditions during the day. In


hypertensive individuals, variations are even more pronounced.

Normally, the blood pressure rises while at work or play and falls to its lowest levels during sleep. So, do not be overly concerned by the results of one measurement.

Take measurements at the same time every day using the procedure described in this manual, and know your normal blood pressure.

Many readings give a more comprehensive blood pressure history.

Be sure to note date and time when recording your blood pressure. Consult your doctor to interpret your blood pressure data.

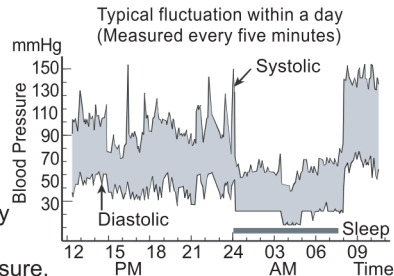

## PRECAUTIONS BEFORE USE

1. If you are taking medication, consult with your doctor to determine the most appropriate time to measure your blood pressure. NEVER change a prescribed medication without first consulting with your doctor.

2. For people with irregular or unstable peripheral circulation problems due to diabetes, liver disease, hardening of the arteries, etc., there may be fluctuation in blood pressure values measured at the upper arm versus at the wrist.

3. Measurements may be impaired if this device is used near televisions, microwave ovens, X-ray, mobile phone equipment or other devices with strong electrical fields. To prevent such interference, use the monitor at a sufficient distance from such devices or turn them off.

4. Before using, should wash your hands.

5. Do not measure on the arm which simultaneously used monitoring ME Equipment, otherwise it could cause loss of function.

6. Consult your doctor if the unexpected readings are obtained, also please refer to "Trouble shooting" of the manual.

7. The reading is probably a little lower than measured in the hospital due to the steady mood at home.

8. Cuff pressure range 0-299mmHg

## FEATURES OF THE PRODUCT

1. Auto store 90/90 measurements.
2. Date/Time.
3. Automatically turen off(within 1 minute).

4. Kpa/mmHg unit exchange.

5. Error physical movement prompt


6. Cuff wearing prompt

7. WHO blood pressure classification display.


8. AVG: average value in the morning, average value at night (see User Manual for details).

9. CHECK automatic measurement mode

## PARTS IDENTIFICATION

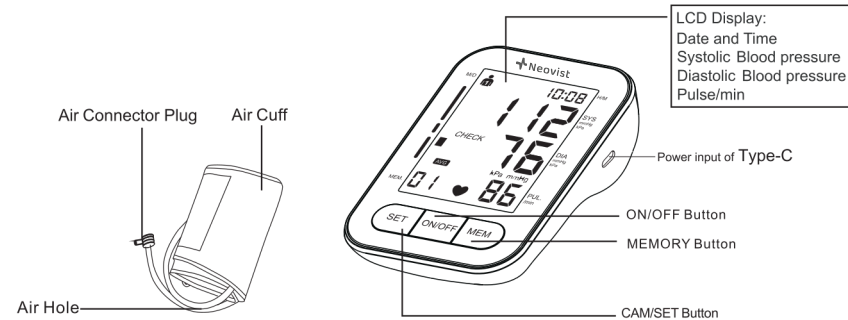

## SYMBOLS ON DISPLAY

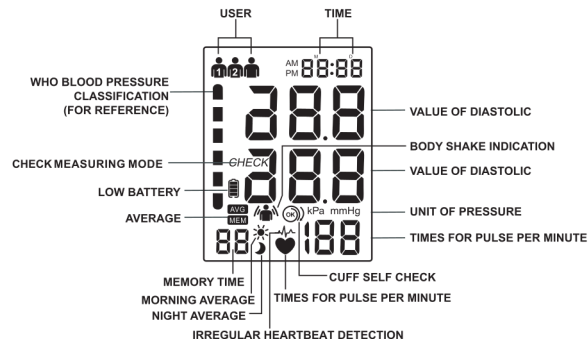

Component:



Arm Cuff

Accessory:



Manual


Manual



1.5V Batteries  
(LR03 or AAA)

## INSERT OR REPLACE BATTERIES

 1. Remove the battery cover.
2. Insert new batteries into the battery compartment as shown, taking care that the polarities(+) and (-)are correct.
3. Close the battery cover, Use only LR03, AAA batteries.





1.5V Batteries  
(LR03 or AAA)



Disposal of empty battery to the authorized collecting party subject to the regulation of each individual territory.

### CAUTION

- Insert the batteries as shown in the battery compartment. If not, the device will not work.
- When  (LOW BATTERY mark) blinks in the display, replace all batteries with new ones. Do not mix old and new batteries. It may shorten the battery life, or cause the device to malfunction.
-  (LOW BATTERY mark) does not appear when the batteries run out.
- Please ensure to distinguish positive polar "+" and negative polar "-" of batteries when replacing batteries.


- Batteries, which have fluid on surface or be modified, can not be inserted into the products.
- Battery short circuit must be prevented.
- Battery life varies with the ambient temperature and may be shorten at low temperatures.
- The batteries may leak and cause a malfunction.
- Use the specified batteries only. The batteries provided with the device are for testing monitor performance and may have a shorter life.
- Used batteries may leak and damage the main unit. Pleases observe the following points.
  - \* If you are not going to use the unit for a long period of time (approximately three months or more), remove the batteries.
  - \* Replace worn batteries with their polarities in the correct direction.

## TIME SYSTEM SETUP

1. In the off state, press the "SET" button to LCD display the time and measure the user
2. Press and hold "SET" key until the year number displays and flashes on LCD to enter setting mode.
3. Press "MEM" key to adjust the year, then press "SET" key again to save your setting and enter the month setting mode.




4. Press "MEM" key to adjust the month. Following the same steps to adjust date/hour/minute until setting completed.

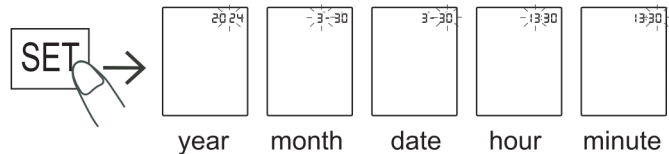

## SELECT USER

In the shutdown state, press "SET" button to select the user "U1" or user "U2", which can be measured separately, and store memory, check the memory.

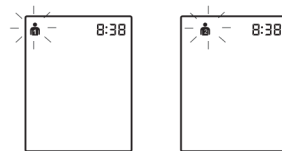


## AVERAGE VALUE INQUIRY

Press " MEM " button to inquire various memory average values of user 1 or user 2.

" **AVG** "Average Value Display: the latest 3 groups of memory average values (Memory values are displayed regardless of period).

" ☀ " Display of average value in the morning: the latest 3 groups of memory average values measured during 4:00~9:59 every day.

" ☾ " Display of average value at night: the latest 3 groups of memory average values measured during 17:00~2:00 (the next day morning) every day.

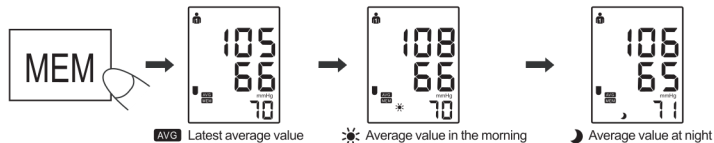


## UNIT CONVERSION mmHg/kPa DISPLAY

The goods have mm Hg(mmHg), kPa (kPa) two kinds of blood pressure display units(mmHg factory to express).

Press and hold the "ON/OFF" button for 10 seconds to display unit switching interface, then

press "MEM" key to select mmHg / kPa, press "ON/OFF" button to exit. The units will be chosen by the above shows mmHg/kPa after decontrol, After the normal boot unit values are shown as the pressure. Also select memory unit value changes

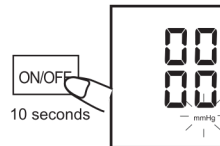

## WHO BLOOD PRESSURE CLASSIFICATION DISPLAY

Diastolic blood pressure

Reference material: journal of hypertension 1999. vol 17 No.2

- Grade 3 hypertension (severe)
- Grade 2 hypertension (moderate)
- Grade 1 hypertension (mild)
- High-normal
- Normal
- Optimal


## ATTACHING THE ARM CUFF

1. Wrap the arm cuff around the upper arm, about (2-3) cm above the elbow, as shown. place the cuff direct the skin, as clothing may cause a faint pulse, and result in a measurement error.

2. constriction of the upper arm, caused by rolling up a shirtsleeve, may prevent accurate readings.

3. Secure the arm cuff with Velcro Strip in such a way that it lies comfortably and is not too tight. Lay the arm on the table (palm upwards) so that the arm cuff is at the same height as the heart. Make sure that the tube is not kinked.

4. Measure your arm circumference for cuff selection, refer to "Specifications"

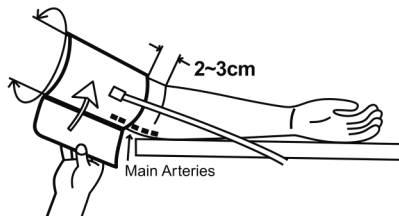

## HOW TO TAKE PROPER MEASUREMENTS

For the most accurate blood pressure measurement:

● PATIENT position in NORMAL USE, including:


- 1) comfortably seated.
- 2) legs uncrossed .

3) feet flat on the floor.

4) back and arm supported .

5) middle of the CUFF at the level of .

- Remain still and keep quiet during measurement.
- Relax as much as possible and not talk during the measurement process.
- Measure your blood pressure at about the same time every day.
- Do not measure right after physical exercise or a bath. Take a rest for twenty or thirty minutes before taking the measurement.
- It could affect the readings in the below conditions:
- Within in an hour after dinner, after having wine ,coffee, red tea, sports, bathing; talking, being nervous, being in unsteady mood, bending forward, moving, room temperature dramatically changing during measuring; In the moving vehicles, long time continuous measuring.

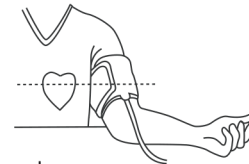

## HOW TO MEASURE BLOOD PRESSURE


1. Set up the arm cuff to your upper arm as previous section of "ATTACHING THE ARM CUFF"



2. Press ON/OFF to Power on, display show all then reset to "0", then start measurement, will have voice indication(If have voice feature) Start to Inflate, display have inflation icon blinked.

**Press and hold the ON/OFF button for 3 seconds to enter the visitor measurement mode, and the measured data will not be stored in the memory value.**

- \* Device already start to measure your pressure when do inflation, please don't move you hand, wrist or arm.

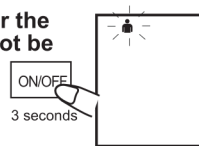

### "OK" "CUFF WEARING PROMPT

The cuff wearing icon can help remind the user whether the cuff is worn correctly or not.

When cuff is worn correctly, it shows ☺ . If loosely, it shows ☹ in this case, please press [ON/OFF] button to turn off the power, and then re-wear the cuff correctly before measurement.

### "🚶" "ERROR PHYSICAL MOVEMENT PROMPT


Physical movement during measurement may lead to incorrect measurement result. Please re-measure if any physical movement occurs.

## OPERATING METHOD OF CHECK AUTOMATIC MEASUREMENT MODE

1. Press "ON/OFF " button to turn on the monitor for measurement, when the blood pressure value on LCD screen increases, press [ SET ] button to entre the CHECK automatic measurement mode, and LCD screens "CHECK".




2. After 1st measurement, LCD will show 20s countdown then start 2nd measurement.

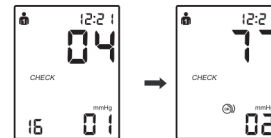

3. After the second measurement, the blood pressure monitor analyzes the values measured during the first measurement and the second measurement, if these values are within standard scope, the average blood pressure value will be calculated out and displayed on LCD screen.

\* If  $SYS\ BP1 - SYS\ Bp2 \geq 12\text{mmHg}$  ,  $DIA\ BP1 - DIA\ BP2 \geq 6\text{mmHg}$  , it will enter into "20" seconds countdown, and automatically re-start to the third measurement. After finishing measurement, the device will calculate the blood pressure average value, and show it on the LCD screen.

\* If pulse rate  $\leq 60$  or  $\geq 120$  or irregular heartbeat , blood pressure monitor will automatically take measurements for three times continuously. After finishing measurements, the device will calculate the blood pressure average value and show it on the LCD screen.

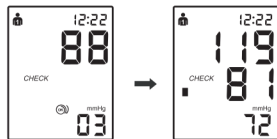

After finishing measurements, the air in arm cuff will automatically discharge .There

will display the blood pressure value, pulse rate, and blood pressure indication on LCD. And there will be voice reminding measurement values (If the product with voice off or without voice function, there will be no voice reminding measurement values ).



\* If the device can not take measurements and displays "E " on LCD, please refer to the manual instruction (TROUBLESHOOTING).

\* If the cuff is loose during measurement , please wrap the cuff well and take a measurement again.

\* It can be stopped measurement halfway if occurs emergency situation. Please press ON/FF button to turn off power and stop inflating. The air in arm cuff can be automatically discharged.

**Finish the measurement .Press the ON/OFF button to turn off the power.**


### READ MEMORY

Press "MEM" button, a memory reading out the latest measurements , "MEM" for the buttons (UP). "SET" button for the memory (DOWN)

Power Measurement closure or after the end of the state .can press the "MEM" button read out the latest measurement of memory.

## DELETE MEMORY

The state read out the memory press the (memory) button five seconds, the LCD display “MEM” has been to delete all memory.

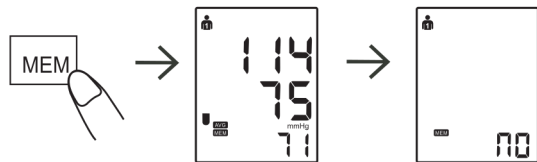


## CLEAN AND MAINTENANCE

1. Keep this device in the case provided with the device when you do not use it.
2. Do not fold the arm cuff too tightly.
3. Clean the monitor with a soft dry cloth. Do not use any cleaning solution.
4. Do not submerge the device or any components in water.
5. Store the device and the components in a clean and safe location;
6. Cuff shall be detached from the device softly and slowly. The clean steps for the cuff is provided as following.

\*It is recommended that clean the cuff after each use.

\*Completely wipe the inner side (the side that contacts skin) of the cuff with a soft cloth lightly moistened with 75% Ethyl alcohol 3 times. Replace the soft cloth after each wipe.

\*Then air dry the cuff.

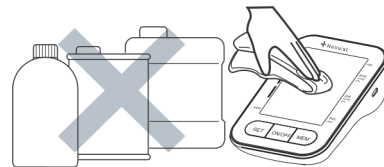

## CAUTION

- \* Do not submerge the device or any of the components in water. Do not subject the monitor to extreme hot or cold temperatures, humidity or direct sunlight.
- \* Store the device and the components in a clean, safe location.
- \* Do not subject the monitor to strong shocks, such as dropping the unit on the floor.
- \* Remove the batteries if the unit will not be used for three months or longer. Always replace all the batteries with new ones at the same time.
- This product is designed for use over an extended period of time; however, it is generally recommended that it be inspected and calibrated every two years to ensure proper function and performance.
  - \* See the Calibration Method for more details

## SPECIFICATIONS

Measuring Method	Oscillometric Measurement
Indication	Digital LCD display
Measuring Range	Pressure:(30~280)mmHg Pulse:(40~199)Beat/min
Accuracy	Static Pressure: ±3mmHg Pulse: ±5%
Memory	90/90 Memories
Power supply	4x1.5V Batteries(LR03 or AAA) use alkaline battery, measure above 200 times.
Operating condition	+5°C~+40°C. 15%RH~93%RH Atmospheric pressure: 70kPa~106kPa
storage condition	-20°C~+55°C. 0%RH~93%RH Atmospheric pressure:50kPa~106kPa
Dimensions	Approx: 97(W)X137(H)X46(D)mm
Weight	Approx: 380g, excluding batteries
Classification	Type BF
Upper arm circumference	(22~32)cm
AC adapter	INPUT: 100-240V~ 50/60Hz, 0.2A OUTPUT: 6V === 500mA

25 \* Specifications may be changed without notice in the event of improvement being made.

- 1.Type of protection against electric shock: INTERNALLY POWERED EQUIPMENT.
- 2.Degree or protection against electric shock:TYPE BF APPLIED PART.
- 3.Mode of operation: CONTINUOUS OPERATION.
- 4.Equipment not suitable for categoryAP&APG equipment use in presence.

### STATEMENT

the system might not meet its performance specifications if stored or used outside the temperature and humidity as mentioned below:  
 Operating conditions: +5°C~+40°C. 15%RH~93%RH 70kPa~106kPa  
 Storage conditions: -20°C~+55°C. 0%RH~93%RH

## TROUBLE SHOOTING

If you have trouble in using the unit please check the following points first.

ERROR DISPLAY	POSSIBLE CAUSE	HOW TO CORRECT
Nothing is displayed When you push the POWER button or ☐ Battery icon flash	No battery installation	Insert batteries
	Battery worn out	Replace new batteries
	The polarities of batteries placed wrongly	Insert battery in the correct polarities

26

E1:can't normally Increase pressure	Check your arm cuff if any air leakage	Replace arm cuff with new one
E3 inflate pressure too high	Pressure value of more than 299mmHg	Re-measurement or send back dealer for re-calibrate pressure
E2E4:have shaking while measurement	Hand or body shaking while measurement	keeping static and correct gesture to measure again
☐ Battery icon on	Battery low power	Replace battery and measure again
The systolic pressure Value or diastolic Pressure value too high	1.The arm cuff was held lower than your heart	keeping correct position and gesture to measure again
	2.The arm cuff was not attached properly	
	3.You moved your body or spoke during measurement	
The systolic pressure Value or diastolic Pressure value too low	1.The arm cuff was held higher than your heart	
	2.you moved your body or Spoke during measurement	

## Appendix 1 Guidance and Manufacturer Declaration Tables

<b>Guidance and manufacturer's declaration- electromagnetic emission</b>		
The Model NV-PG-B18 is intended for use in the electromagnetic environment specified below. The customer or the user of the Model NV-PG-B18 should assure that it is used in such an environment.		
<b>Emissions test</b>	<b>Compliance</b>	<b>Electromagnetic environment – guidance</b>
RF emissions CISPR 11	Group 1	The Model NV-PG-B18 uses RF energy only for its internal function. Therefore, its RF emissions are very low and are not likely to cause any interference in nearby electronic equipment.
RF emissions CISPR 11	Class B	The Model NV-PG-B18 is suitable for use in all establishments, including domestic establishments and those directly connected to the public low-voltage power supply network that supplies buildings used for domestic purposes.
Harmonic emissions IEC 61000-3-2	A	
Voltage fluctuations /flicker emissions IEC 61000-3-3	Complied	

<b>Guidance and manufacturer's declaration – electromagnetic immunity</b>			
The Model NV-PG-B18 are intended for use in the electromagnetic environment specified below. The customer or the user of the Model NV-PG-B18 should assure that it is used in such an environment.			
<b>Immunity test</b>	<b>IEC 60601 test level</b>	<b>Compliance level</b>	<b>Electromagnetic environment - guidance</b>
Electrostatic discharge (ESD) IEC 61000-4-2	±8 kV contact  ±2 kV, ±4 kV, ±8 kV, ±15 kV air	±8 kV contact  ±2 kV, ±4 kV, ±8 kV, ±15 kV air	Floors should be wood, concrete or ceramic tile. If floors are covered with synthetic material, the relative humidity should be at least 30 %.
Electrostatic transient/burst IEC 61000-4-4	± 2 kV for power supply lines 100 kHz repetition frequency ±1 kV for input/output lines	± 2 kV for power supply lines 100 kHz repetition frequency ±1 kV for input/output lines	Mains power quality should be that of a typical commercial or hospital environment.

Surge IEC 61000-4-5	±0.5 kV, ±1 kV differential mode line-line	±0.5 kV, ±1kV differential mode line-line	Mains power quality should be that of a typical commercial or hospital environment.
Voltage dips, short interruptions and voltage variations on power supply input lines IEC 61000-4-11	0% UT (100% dip in UT ) for 0.5 cycle at 0°, 45°, 90°, 135°,180°, 225°, 270°, and 315° 0% UT (100% dip in UT) for 1 cycle at 0° 70% UT (30% dip in UT ) for 25/30 cycles at 0° 0% UT(100% dip in UT ) for 250/300 cycle at 0°	0% UT (100% dip in UT)for 0.5 cycle at 0°, 45°, 90°, 135°,180°, 225°, 270°, and 315° 0% UT (100% dip in UT) for 1 cycle at 0° 70% UT (30% dip in UT) for 25/30 cycles at 0° 0% UT(100% dip in UT) for 250/300 cycle at 0°	Mains power quality should be that of a typical commercial or hospital environment. If the user of the Model NV-PG-B18 product name requires continued operation during power mains interruptions, it is recommended that the Model NV-PG-B18 be powered from an uninterruptible power supply or a battery.


Power frequency (50/60 Hz) magnetic field  IEC 61000-4-8	30 A/m,50/60Hz	30 A/m,50/60Hz	Power frequency magnetic fields should be at levels characteristic of a typical location in a typical commercial or hospital environment.
NOTE: UT is the a. c. mains voltage prior to application of the test level.			

**Guidance and manufacturer's declaration-electromagnetic immunity**

The Model NV-PG-B18 are intended for use in the electromagnetic environment specified below. The customer or the user of the Model NV-PG-B18 should assure that it is used in such an electromagnetic environment.

Immunity test	IEC 60601 test level	Compliance level	Electromagnetic environment - guidance
---------------	----------------------	------------------	--

Conducted RF  IEC 61000-4-6	3 Vrms 150 kHz to 80 MHz 6 Vrms 150 kHz to 80 MHz outside ISM bands	6 V	Portable and mobile RF communications equipment should be used no closer to any part of the Models NV-PG-B18 including cables, than the recommended separation distance calculated from the equation applicable to the frequency of the transmitter.  <b>Recommended separation distance</b>  $d = \left[ \frac{3.5}{V_1} \right] \sqrt{P}$ $d = \left[ \frac{12}{V_2} \right] \sqrt{P}$ $d = \left[ \frac{12}{E_1} \right] \sqrt{P} \quad 80\text{MHz to } 800\text{MHz}$ $d = \left[ \frac{23}{E_1} \right] \sqrt{P} \quad 800\text{MHz to } 2.7\text{GHz}$
-----------------------------------	---	-----	---

Radiated RF IEC 61000-4-3	10 V/m 80 MHz to 2.7 GHz	10 V/m	<p>Where <math>P</math> is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer and <math>d</math> is the recommended separation distance in metres(m).</p> <p>Field strengths from fixed RF transmitters, as determined by an electromagnetic site survey, should be less than the compliance level in each frequency range</p> <p>b Interference may occur in the vicinity of equipment marked with the following symbol:</p> 
------------------------------	-----------------------------	--------	--

NOTE 1 At 80 MHz and 800 MHz, the higher frequency range applies.

NOTE 2 These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.

a The ISM (industrial, scientific and medical) bands between 0,15 MHz and 80 MHz are 6,765 MHz to 6,795 MHz; 13,553 MHz to 13,567 MHz; 26,957 MHz to 27,283 MHz; and 40,66 MHz to 40,70 MHz. The amateur radio bands between 0,15 MHz and 80 MHz are 1,8 MHz to 2,0 MHz, 3,5 MHz to 4,0 MHz, 5,3 MHz to 5,4 MHz, 7 MHz to 7,3 MHz, 10,1 MHz to 10,15 MHz, 14 MHz to 14,2 MHz, 18,07 MHz to 18,17 MHz, 21,0 MHz to 21,4 MHz, 24,89 MHz to 24,99 MHz, 28,0 MHz to 29,7 MHz and 50,0 MHz to 54,0 MHz.

b The compliance levels in the ISM frequency bands between 150 kHz and 80 MHz and in the frequency range 80 MHz to 2,7 GHz are intended to decrease the likelihood that mobile/portable communications equipment could cause interference if it is inadvertently brought into patient areas. For this reason, an additional factor of 10/3 has been incorporated into the formulae used in calculating the recommended separation distance for transmitters in these frequency ranges.

c Field strengths from fixed transmitters, such as base stations for radio (cellular/cordless) telephones and land mobile radios, amateur radio, AM and FM radio broadcast and TV broadcast cannot be predicted theoretically with accuracy. To assess the electromagnetic environment due to fixed RF transmitters, an

electromagnetic site survey should be considered. If the measured field strength in the location in which the Model NV-PG-B18 is used exceeds the applicable RF compliance level above, the Model NV-PG-B18 should be observed to verify normal operation. If abnormal performance is observed, additional measures may be necessary, such as re-orienting or relocating the Model NV-PG-B18

d Over the frequency range 150 kHz to 80 MHz, field strengths should be less than 10 V/m.

**Recommended separation distances between portable and mobile RF communications equipment and the Model NV-PG-B18**

The Model NV-PG-B18 is intended for use in an electromagnetic environment in which radiated RF disturbances are controlled. The customer or the user of the Model NV-PG-B18 can help prevent electromagnetic interference by maintaining a minimum distance between portable and mobile RF communications equipment (transmitters) and the Model NV-PG-B18 as recommended below, according to the maximum output power of the communications equipment.

Rated maximum output of transmitter  W	Separation distance according to frequency of transmitter m			
	150 kHz to 80 MHz outside ISM bands  $d = \left[ \frac{3.5}{V_1} \right] \sqrt{P}$	150 kHz to 80 MHz in ISM bands  $d = \left[ \frac{12}{V_2} \right] \sqrt{P}$	80 MHz to 800MHz  $d = \left[ \frac{12}{E_1} \right] \sqrt{P}$	800 MHz to 2,7 GHz  $d = \left[ \frac{23}{E_1} \right] \sqrt{P}$
0.01	0.12	0.12	0.12	0.23
0.1	0.38	0.38	0.38	0.73
1	1.2	1.2	1.2	2.3
10	3.8	3.8	3.8	7.27
100	12	12	12	23

For transmitters rated at a maximum output power not listed above the recommended separation distance d in metres (m) can be estimated using the equation applicable to the frequency of the transmitter, where P is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer.

NOTE 1 At 80 MHz and 800 MHz, the separation distance for the higher frequency range applies.

NOTE 2 The ISM (industrial, scientific and medical) bands between 0,15 MHz and 80 MHz are 6,765 MHz to 6,795 MHz; 13,553 MHz to 13,567 MHz; 26,957 MHz to 27,283 MHz; and 40,66 MHz to 40,70 MHz. The amateur radio bands between 0, 15 MHz and 80 MHz are 1,8 MHz to 2,0 MHz, 3,5 MHz to 4,0 MHz, 5,3 MHz to 5,4 MHz, 7 MHz to 7,3 MHz, 10,1 MHz to 10,15 MHz, 14 MHz to 14,2 MHz, 18,07 MHz to 18,17 MHz, 21,0 MHz to 21,4 MHz, 24,89 MHz to 24,99 MHz, 28,0 MHz to 29,7 MHz and 50,0 MHz to 54,0 MHz.

NOTE 3 An additional factor of 10/3 has been incorporated into the formulae used in calculating the recommended separation distance for transmitters in the ISM frequency bands between 150 kHz and 80 MHz and in the frequency range 80 MHz to 2,7 GHz to decrease the likelihood that mobile/portable communications equipment could cause interference if it is inadvertently brought into patient areas.

NOTE 4 These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.

## CALIBRATION METHOD

1. Press and hold the "ON/OFF, MEM" button at the same time, load the battery, enter the static air pressure calibration mode after the LCD screen is fully displayed, and then release the button.

2. Press ON/OFF to close the internal air valve.
3. Connect the external standard barometric interface and the digital barometer interface to the cuff interface.
4. External input 50mmHg and 200mmHg standard static air pressure, and observe the air pressure value displayed at the position of the LCD systolic pressure (SYS) and the value of the digital pressure gauge should be in the range of +/-3mmHg.



### Caution

1. ME devices can be used in exposed environments, including electromagnetic interference environment to ensure basic safety and basic performance unchanged.
2. In the event of any serious event related to this product, such as serious adverse event, significant alteration of the product resulting in change of intended use, etc., it will be reported to the manufacturer and the competent authorities of the user and/or the member states where the patient is located.

### Notes:

Essential performance: Limits of the error of the manometer,  $\pm 3$ mmHg. Reproducibility of the blood pressure determination,  $\pm 3$ mmHg.

Clinical benefits: Accurate measurement of SBP and DBP, clinical performance meets the requirements of ISO 81060-2:2018.